
HARMONY

ETSS-70

SPEAKER STANDS

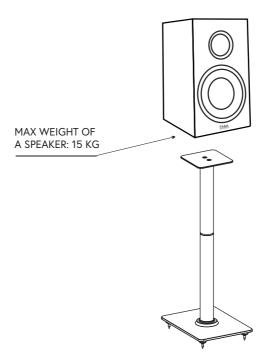

Instruction Manual

Edition 11-2024

Important remarks



An exclamation mark in a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE INSTALLATION AND KEEP IT FOR FUTURE REFERENCE



PACKAGING WARNING

The packaging may contain elements such as plastic, that **should be kept away from small children**.

The thin foil or small elements can stick to the nose and mouth, or may be swallowed and prevent breathing.

Installation

| | UALETTT |
|--|----------------------------------|
| | Do not exc |
| | This produ |
| | Place the |
| | accommo |
| | During ins |
| | If your inst |
| | regions at |
| | to prever |
| | or other pe |
| | cable, etc. |
| | - to prever |
| | to the star |

SAFETY PRECAUTIONS

- Do not exceed the maximum speaker weight (15 kgs for 1 speaker stand).
- This product is intended for indoor use.
- Place the stand on a stable and hard surface, which is strong enough to accommodate the weight of the stand and the speaker.
- During installation tighten screws firmly, but do not overtighten them.
- If your installation requires additional safety precautions (for instance in regions at risk of earthquakes):

- to prevent the stand from tipping over, we recommend anchoring it to a wall or other permanent construction (using anchoring accessories such as a steel cable, etc.).

- to prevent the speaker from falling off the stand, we recommend securing it to the stand (using anchoring accessories such as a steel cable, etc.). **Note!** Anchoring accessories must to be purchased separately and are not delivered with this product.

· Use only as intended. Do not stand, hang or climb on the product.

TAGA EUROPE: POLPAK POLAND Sp. z o.o. AL. JEROZOLIMSKIE 331A 05-816 REGUŁY k/WARSZAWY POLAND

www.TagaHarmony.com

