

TAGGA[®]

CHARMONY

To Achieve Glorious Acoustics

TRS ROCK Series

GARDEN RAINPROOF SPEAKERS



Instruction Manual

Introduction

Thank you for purchasing this TAGA Harmony speakers.

Garden series speakers are designed for installation in gardens, patios, terraces and other outdoor open spaces. Durable housing with natural and non-intrusive appearance allows TAGA Harmony speakers to perfectly adapt in the architecture of the environment.

This instruction manual provides all of the information that you need to know about your TAGA Harmony TRS speaker. Please read it carefully before you start using the unit.

Specifications

Full technical specifications are available on the www.Tagaharmony.com website.

Speaker Placement and Set-up

1. Select location

It is advisable to plan all aspects of installation before starting the setup.

Great care should be taken to ensure that all local building and legal regulations are followed. In case of any doubt contact a professional TAGA Harmony installer or dealer.

When placing the speaker, find the position offering the best sound coverage throughout the listening area.

When installing more than 1 speaker make sure the speakers are placed at least 2 meters (6.6 feet) from each other what usually gives the best sound effects.

Avoid placing the speaker in a direct path of water sprinklers or where it will be continually exposed to chlorinated solvents from a pool or spa.

For stereo effect you have to use 2 mono speakers for a single stereo audio source.

The SM (stereo / mono) models ensure high quality, dual-channel sound from a single speaker. The SM models can provide much wider dispersion than traditional speakers as well as eliminate sound imbalances which can be heard once listeners move around the area.



2. Run the speaker cable

Before hiding the cable (digging in etc.), run the speaker cable from the speaker to the sound source (amplifier, receiver etc.). Ensure to avoid any obstacles such as walls, electrical cables, water sprinklers and pipes.

If you use the speaker in the outdoor environment make sure to use a speaker cable for the outdoor use. The speaker cable is not supplied with this product.



3. Hide the speaker cable

To avoid accidental interruption or disconnection of the speaker cable it is recommended to place the cable approximately 10 cm (0.33 feet) in the ground or fix it to the ground with U type clamps (not supplied with this product).

To further secure the cable in the ground we recommend to place it in a PVC / Nylon conduit tube (not supplied with this product).




Speaker Placement and Set-up

4. Connect the sound source

Before connecting the speaker make sure that your audio source (amplifier, receiver etc.) is switched off. Connect the speaker cable to the speaker and amplifier.

Pay attention to connecting the polarity of the speaker correctly with the amplifier speaker output terminals.


Each channel of your amplifier has 2 speaker output terminals: one is + (usually RED color) and one is - (usually BLACK color). Please refer to your amplifier's instruction manual for more information.

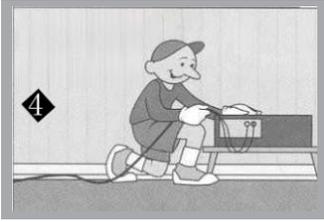

Mono TRS Speaker

A pair of short speaker cables is located at the bottom of your TRS speaker (protected by an external black sleeve): one cable is + (RED color) and one is - (BLACK color). Use a speaker cable to connect TRS speaker cables with your amplifier.

Each channel of your amplifier should be connected to a single speaker. The amplifier output speaker terminal marked with + should be connected with + (RED color) speaker cable of your TRS speaker and the one marked with - should be connected with - (BLACK color) speaker cable of your TRS speaker.

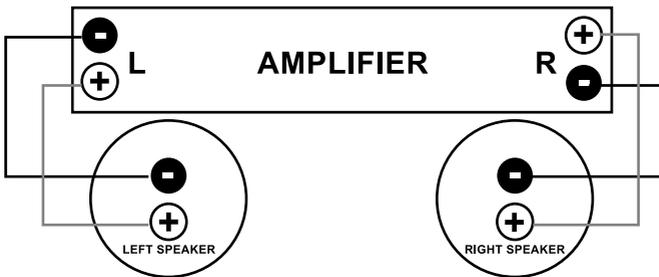

SM (stereo / mono) TRS Speaker


2 pairs of short speaker cables are located at the bottom of your TRS SM speaker (each pair is protected by an external black sleeve). The pair for Left channel is marked with L on the speaker's cabinet, the pair for Right channel is marked with R on the speaker's cabinet. For each channel: one cable is + (RED color) and one is - (BLACK color). Use a speaker cable to connect TRS speaker cables with your amplifier.

Both channels of your amplifier can be connected to a single SM speaker.

The amplifier Left output speaker terminal marked with + should be connected with Left

Speaker Placement and Set-up

+ (RED color) speaker cable of your TRS SM speaker, and the amplifier Left output speaker terminal marked with - should be connected with Left - (BLACK color) speaker cable of your TRS SM speaker. The same should be done for the Right channel.

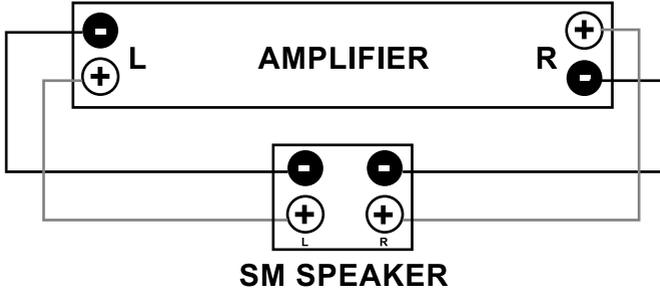


If your speaker is wired incorrectly it will be out of phase and it will sound indistinctly and with a weak bass. Re-check your connections and correct the polarity by reversing the connections.

NOTE! Make sure to securely connect the speaker cables with the cables of your TRS speaker.

WARNING! Check whether your amplifier may work with impedance of your TAGA Harmony speaker. Otherwise you may burn the amplifier and damage the speakers - it may void your warranty.

5. Your system is ready to use

ENJOY YOUR MUSIC
EVERYWHERE!

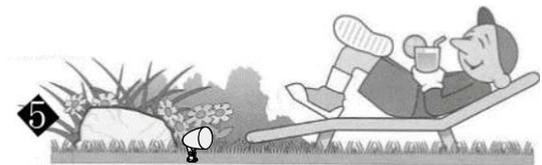

We strongly advise to contact a professional installer or dealer in order to install TAGA Harmony products.

We recommend using high quality TAGA Harmony speaker cables and other installation accessories.



Your product is marked with the symbol as showed on the left.
For EU (European Union) member users:
This product has been tested and found in compliance with requirements of the European Community 2014/108/EC directive.



IMPORTANT!

Your product is marked with the symbol as showed on the left.
For EU (European Union) member users:

According to the WEEE (Waste electrical and electronic equipment) Directive, do not dispose of this product as household waste or commercial waste. Waste electrical and electronic equipment should be appropriately collected and recycled as required by practices established for your country. For information on recycling of this product, please contact your local authorities, your household waste disposal service or the shop where you purchased the product.

TAGA EUROPE

POLPAK POLAND Sp. z o.o.
AL.JEROZOLIMSKIE 333A
05-816 REGULY k/WARSZAWY, POLAND
Email: sales@tagaharmony.com

www.Tagaharmony.com